safety

- **Do not use the juicer if the filter is damaged.**
- Never put the motor unit, cord or plug in water – you could get an electric shock.
- Switch off and unplug:
  - before fitting or removing parts
  - before cleaning
  - after use.
- Never use a damaged juicer. Get it checked or repaired: see 'Service and customer care', page 6.
- Only use the pusher supplied. Never put your fingers in the feed tube. Unplug before unblocking the feed tube.
- Before removing the lid, switch off and wait for the filter to stop.
- Don't let children or infirm people use the juicer without supervision.
- Never let the cord touch hot surfaces or hang down where a child could grab it.
- Don't touch moving parts.
- Never leave the juicer on unattended.
- This juicer is for domestic use only.
- Don’t let children play with the machine.

before plugging in

- Make sure your electricity supply is the same as the one shown on the underside of your juicer.

Important (UK only)

- The wires in the cord are coloured as follows:
  Blue = Neutral, Brown = Live.
- This juicer complies with European Economic Community Directive 89/336/EEC.

before using for the first time

1. Remove all packaging.
2. To take your juicer apart: see 'To take your juicer apart', page 5.
3. Wash the parts: see 'Cleaning', page 5.

know your Kenwood centrifugal juicer

① pusher
② feed tube
③ lid
④ filter
⑤ pulp collector
⑥ lid release button
⑦ motor unit
⑧ speed control
⑨ juice outlet
⑩ compartment for excess cord

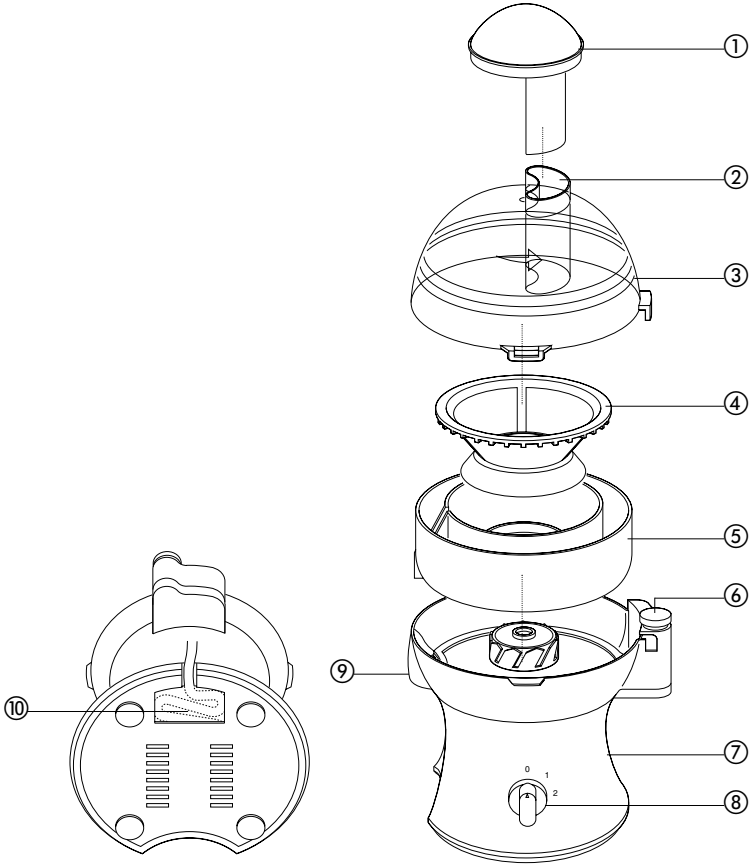

to assemble and use your juicer

preparing food

- Remove stones (plums, peaches, cherries etc).
- Remove tough skins (melons, pineapples, cucumbers, potatoes etc).
- Soft-skinned and other foods just need washing (apples, pears, carrots, radishes, lettuce, cabbage, parsley, spinach, grapes, strawberries, celery etc).
- Citrus Fruit - Peel and remove the white pith, otherwise the juice may taste bitter. For best results Kenwood citrus juicers are recommended for citrus fruit.

assembly and use

1 Fit the pulp collector ❶ so that it's slot sits above the juice outlet ❷
2 Fit the filter inside the pulp collector ❸
3 Put the lid on and turn until the catch ❹ locks under the lid release button ❺. **Your juicer will not work if the lid is unlocked**.
4 Push any excess cord into the compartment in the base.
5 Put a glass under the outlet ❻
6 Cut the food into small pieces to fit the feed tube.
7 Switch on ❼ and push down with the pusher. Use speed 1 for softer food; speed 2 for harder food.

- Some very hard foods may make your juicer slow down or stop. If this happens switch off and unblock the filter.
- Switch off and clear the pulp collector regularly during use. **Always unplug after use**.

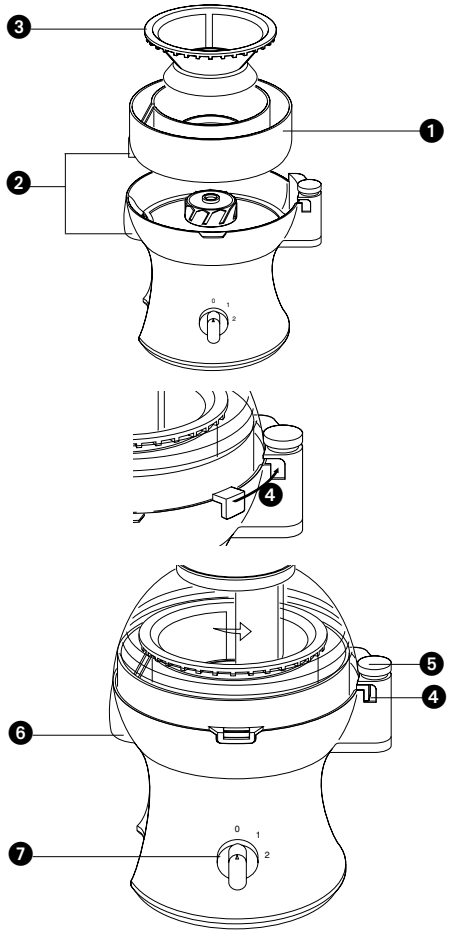

hints

- Insert soft food slowly to get the most juice.
- Vitamins disappear - the sooner you drink your juice, the more vitamins you'll get.
- If you need to store the juice for a few hours put it in the fridge. It will keep better if you add a few drops of lemon juice.
- Don't drink more than three 230mls (8 fl.oz.) glasses of juice a day unless you're used to it.
- Dilute juice for children with an equal amount of water.
- Juice from dark green (broccoli, spinach etc) or dark red (beetroot, red cabbage etc) vegetables is extremely strong, so always dilute it.
- Fruit juice is high in Fructose (fruit sugar), so people with diabetes or low blood sugar should avoid drinking too much.
- Don't mix fruit and vegetable juice together (apart from apple and carrot) - it can cause painful wind or bloating.

to take your juicer apart

1 Unplug.
2 Lift out the pusher ❶
3 Hold down the lid release button ❷ and turn the lid clockwise. Lift off the lid.
4 Lift out the filter ❸
5 Lift out the pulp collector ❹

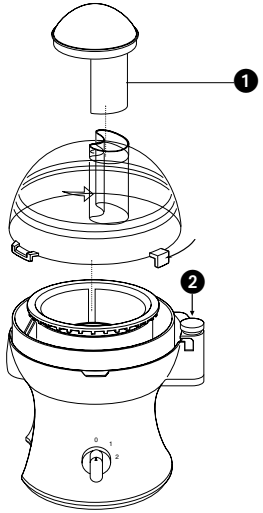

cleaning

- Before cleaning, unplug your juicer.
- If the filter is too tight to remove, wait a few minutes until it loosens up.
- We don't recommend washing any of the parts in the dishwasher.
- Some foods, eg carrot, will discolour the plastic. Rubbing with a cloth dipped in vegetable oil helps remove discolouring.

motor unit
- Wipe with a damp cloth, then dry.

pulp collector, lid, pusher
- Wash, then dry.

filter
- Clean using a soft brush.
- **Check the filter regularly for signs of damage. Do not use if the filter is damaged. Refer to “service and customer care”**

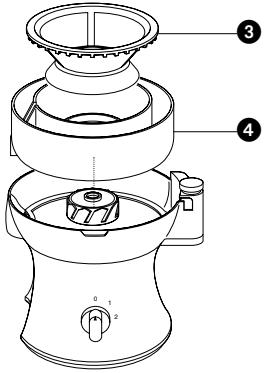

service and customer care

- If the cord is damaged it must, for safety reasons, be replaced by KENWOOD or an authorised KENWOOD repairer.

UK

If you need help with:

- using your juicer or
- servicing or repairs (in or out of guarantee)

☎ call Kenwood customer care on **023 9239 2333. Have your model number ready** - it's on the underside of your juicer.

- **spares and attachments**

☎ call 0870 2413653.

other countries

- Contact the shop where you bought your juicer.

UK only

guarantee

If your juicer goes wrong within one year from the date you bought it, we will repair or **where necessary** replace it free of charge provided;

- you have not misused, neglected or damaged it;
- it has not been modified (unless by Kenwood);
- it is not second-hand;
- it has not been used commercially;
- you have not fitted a plug incorrectly; and
- **you supply your receipt to show when you bought it.**

This guarantee does not affect your statutory rights.

instructions

Kenwood **JE350 & JE356 series**

With your Kenwood Centrifugal Juicer you can enjoy the delicious, natural taste of the freshest juice - from your own choice of fruit and vegetables. And being a Kenwood, it's easy to use. So enjoy a healthier lifestyle with your Kenwood Centrifugal Juicer.

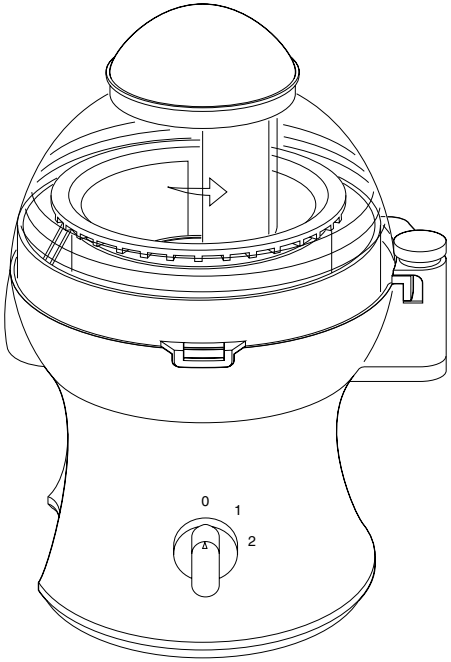

KENWOOD

Kenwood Limited, New Lane, Havant, Hampshire PO9 2NH, UK
www.kenwood.co.uk

Important – UK only

- The wires in the cord are coloured as follows:
  Blue = Neutral, Brown = Live.
- The appliance must be protected by a 3A approved (BS1362) fuse.

Note:

- For non-rewireable plugs the fuse cover MUST be refitted when replacing the fuse. If the fuse cover is lost then the plug must not be used until a replacement can be obtained. The correct fuse cover is identified by colour and a replacement may be obtained from your Kenwood Authorised Repairer (see Service).
- If a non-rewireable plug is cut off it must be DESTROYED IMMEDIATELY. An electric shock hazard may arise if an unwanted non-rewireable pug is inadvertently inserted into a 13A socket outlet.

7973/6